

CAMPBELL HAUSFELD®

English

Coil Roofing Nailer Model NC1545

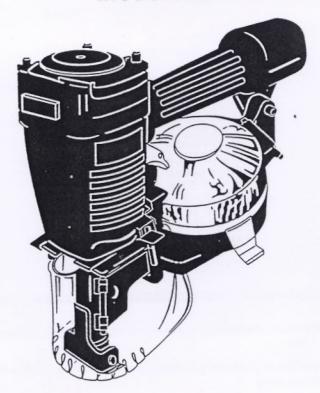

Note: This manual IN 180300AV* has been abridged, reduced or condensed for special inclusion in the service manual. VERSION: USA - ENGLISH

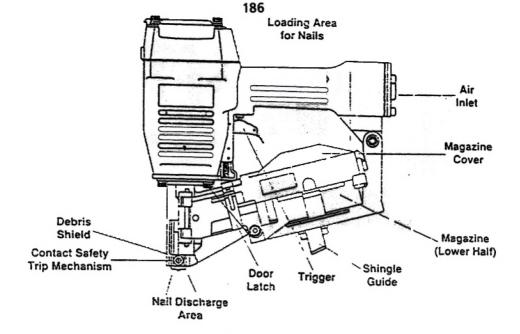

Nailer Specifications

- REQUIRES 2.2 SCFM with 25 nails per minute @ 90 PS!
- AIR INLET 1/4" NPT
- NAIL SIZE RANGE, 7/8" to 1 3/4"
- MAGAZINE CAPACITY 120 nails per load
- SHANK DIAMETER: 120 Diameter
- WEIGHT 7 lbs, 2 oz
- LENGTH: 18 5/8"
- HEIGHT 10 1/2"
- MAXIMUM PRESSURE 115 PSI
- PRESSURE RANGE 70 115 PSI

DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury

WARNING: Indicates an potentially hazardous situation which, if not avoiced, will result in death or serious injury

CAUTION: Indicates a potentially hazardous situation which if not avoided, may result in minor or moderate

injury This symbol may also alert the user to unsafe practices


NOTE Aierts the operator to useful information

The operator of this Nailer must take the necessary precautions to prevent the level of danger indicated by these symbols. The operator is also required to read and understand this instruction manual and all safety warnings, labels, etc

Any employer allowing the use of this Nailer in their field of work must distribute this instruction manual to all users. The employer must also ensure all users read, understand and follow the instructions as described in the manual, safety warnings, labels, etc.

Campbell Hausfeld Nailers meet or exceed Industries' Standards as set forth by the American National Standard/International Staple, Nail and Tool Association in ANSI/ISANTA SNT-101-1983 and SNT-101a-1987

Coil Roofing Naıler Model NC 545 Exploded View

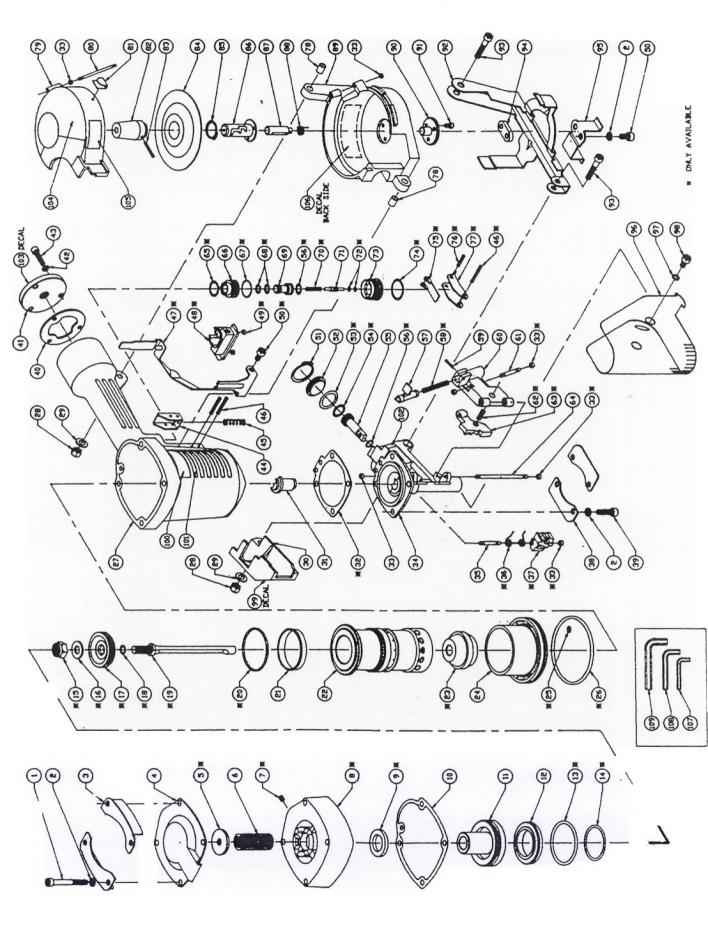

Coil Roofing Nailer Model NC1545 - Parts List

	T			- -				
Key	Part		_]	Key	Part		
No.	No.	Description	Qty.]	No.	No.	Description	Qty.
1	SV200100AV	Hex Soc. Hd. Bolt	4	}	56	-	O-Ring	
2	SV108000AV	Sring Washer	10	1	57	SV205100AV	Door Latch	
3	SV200300AV	Guide Cover	2	1	58		Latch Spring	ı
4	SV200400AV	Deflector	1		59	SV205300AV	Spring Pin	:
5		Seal	1		60	SV205400AV	Door	
5 6 7	SV200600AV	Spring	1		61	SV205500AV	Stopper Finger Pin	
		Screw	1 1		62		Spring	1
8		Cap	1 1		63	3400500044	Stopper Finger	;
9 10	SVOODOOAV	O-Ring	1		64	SV205800AV	Door Shaft Pin	
10	SV200900AV SV201000AV	Gasket	1]	1	65	CV400000AV	O-Ring	ļ ,
12	SV201000AV SV201100AV	Head Valve Piston]		66	SV103800AV	Valve	1 1
13	SVZUTTUUAV	Collar		•	67 68		O-Ring	1 1
14		O-Ring O-Ring	1:	ı	69	SV104100AV	O-Ring	1 1
15		Locknut		1	70	5 104 100AV	Valve Plunger	1
16		Plate Washer		ĺ	70	SV104400AV	Spring	i I
17	1 •	Piston]	72	3 104400AV	Plunger	1
18	•	O-Ring			73	SV104600AV	O-Ring Plunger Cap	1
19	•	Driver	1 1		74	3 10400074	O-Ring	1 1
20	•	O-Ring			75	• .	Secondary Trigger	1
21	SV202000AV	Cylinder Ring		'	76		Spring Pin	1
22	SV202100AV	Cylinder			77		Primary Trigger	j.
23		Bumper	1 1		78	SV206000AV	Bushing	
24	SV202300AV	Cylinder Spacer	1 ;	Į i	79	SV206100AV	Magazine Cover	
25	1	O-Ring		1	80	SV206200AV	Pin	1
26	• !	O-Ring	i		81	SV206300AV	Protection Unit	
27	SV202600AV	Body	1 1	1	82	SV206400AV	Spacer	
28	SV103300AV	Locknut	2	ŀ	83	SV206500AV	Spring Pin	
29	SV202700AV	Plate Washer	2		84	SV206600AV	Magazine Shield	i
30	SV202800AV	Safety Cover	1 1	. 1	85	SV206700AV	O-Ring	: 1
31	SV202900AV	Blade Guide	1 1		86	SV206800AV	Adjust Post	,
32	1	Gasket	1		87	SV206900AV	Tension Post	
33	*SV203100AV	Shaft Ring	7		88	SV207000AV	Spring	
34	SV203200AV	Nose Piece	1		89	SV207100AV	Magazine Case	i
35	SV203300AV	Feed Pin	1		90	SV207200AV	Tension Post Bushing	
36	1	Feed Finger Spring	1		91	SV207300AV	Screw	1
37	0.40000000	Feed Finger	1		92	SV207400AV	Magazine Guide	ı į
38	SV203600AV	Guide Bulb	2	1	93	SV207500AV	Hex Soc Hd Bolt	,
39	SV203700AV	Hex Soc. Hd Bolt	4	1 /	94	SV207600AV	Adjusting Nut	
40	SV203800AV	Gasket		(1	95	SV207700AV		
41 42	SV203900AV	Nipple Cap	1 1	1 1	96	SV207800AV	Debris Shield	
42	SV100400AV	Spring Washer	3	1	97	SV207900AV	Flat Washer	
43	SV100500AV SV204000AV	Hex Soc. Hd Bolt	3	1 1	98	SV208000AV	Hex Soc Hd Bolt	.
45	SV204000AV SV204100AV	Safety Guide	1 1	1 1	99	DK319000AV	Debris Shield Warning Decal	1
46	*SV105000AV	Spring Spring Pin	1 2	1 }	100	DK319100AV	C-H Pro Logo Decal	Ì
47	341000007.1	Safety	3	1 1	101	DK319200AV DK320500AV	Color Code Decal Nail Length Decal	j J
48		Safety Guide		1 1	102	DK320500AV	Oil Daily Decal	į
49	• 1	Tungsten Steel	2	1)	103	DK178700AV DK318400AV	S/N Plate	1
50		Hex Soc. Hd Bolt	4	1)	104	DK316400AV	Nail Adjustment Decal	l
51	SV204600AV	O-Ring	171	1 1	106	DK318700AV	Warning Decal	- 1
52	SV204700AV	Feed Spring Cap	1 1	1 1	107	SV109300AV	3 mm Hex Wrench	- 1
53		O-Ring		1 1	108	SV109400AV	4 mm Hex Wrench	
54		O-Ring		1 1	109	SV109500AV	5 mm Hex Wrench	
55	SV205000AV	Feed Piston	1 1					
		1	1 ' /	į.				

Available as kits or assemblies only. See page 23.

Note: All screws, nuts, bolts, etc. are metric.

O-Rings, Springs, Bumpers, Debris Shield and Driver are considered normal wear items - (See Warranty - Page 28, item 6E).

Coil Roofing Nailer Model NC1545 - Parts Kits & Assemblies

Parts Kits

Includes Key Nos.	Description	Part No.	Qty.
5 9 13 14 20 25 26	* Piston O-Ring Kit Seal O-Ring O-Ring O-Ring O-Ring O-Ring O-Ring	SV154580AV	1 1 1 1 1
33 36 37 53 54 56 58 62 63	Feeder Repair Kit Shaft Ring Feed Finger Spring Feed Finger O-Ring O-Ring O-Ring Latch Spring Spring Stopper Finger	SV154583AV	5 1 1 1 1 1 1 1 1 1 1 1 1
56 65 67 68 70 72 74	* Trigger O-Ring Kit O-Ring O-Ring O-Ring O-Ring Spring O-Ring O-Ring	SV154582AV	1 1 2 1 2 1
14 15 16 17 18 19	Driver Kit O-Ring Locknut Plate Washer Piston O-Ring Driver	NP154599AV	1 1 1 1 1
23 32	Bumper Kit Bumper Gasket	NP154597AV	1

Assemblies

Includes Key Nos.	Description	Part No.	Qty.
- 46 75 76 77	Trigger Assembly Spring Pin Secondary Trigger Spring Pin Primary Trigger	SV108900AV	1 1 1
- 7 8	Cap Assembly Screw Cap	SV208200AV	1 1
- 47 48 49 50	Safety Assembly Safety Safety Foot Tungsten Steel Hex Soc.Hd Bolt	SV208300AV	1 1 2 4

^{*} Complete O-Ring Kit NP154598AV Consists of: Piston O-Ring Kit SV154580AV Trigger O-Ring Kit SV154582AV

Fasteners

The following Campbell Hausfeld coil roofing nails are available at local retail stores. If you need help locating any item, call customer service at 1-800-543-6400 between 8 A.M. and noon or between 1 P.M. and 5 P.M. (Eastern Time Zone), Monday through Friday. Cambausfeld nails meet or exceed Federal Specifications FF-N-105B.

Model #	Length	Shank Size	Shank Type	Point	Finish	Head	Collation	Nails per Coil
FC152200	7/8"	.120"	Smooth	Diamond	Galvanized	Full-round	Wire-Weld	120
FC152500	1"	.120"	Smooth	Diamond	Galvanized	Full-round	Wire-Weld	120
FC153000	1 1/4"	.120"	Smooth	Diamond	Galvanized	Full-round	Wire-Weld	120
FC154000	1 1/2"	120"	Smooth	Diamond	Galvanized	Full-round	Wire-Weld	120
FC154500	1 3/4"	.120"	Smooth	Diamond	Galvanized	Full-round	Wire-Weld	120

Interchange Information

Nails used in the Campbell Hausfeld NC1545 Coil Roofing Nailer will also work in Bostitch N12B, Senco SCN200R, and Hitachi NV 45AB.


COLORMATCH ™ system

Your Campbell Hausfeld Coil Roofing Nailer has a unique green COLORMATCH "stripe. Look for the same green COLORMATCH" stripe on Campbell Hausfeld nail boxes. Simply match the two color stripes to choose the right nails for your coil roofing nailer.

Nailer Repair

Repairs on the nailer must be performed by qualified and experienced service people ONLY.

Replacement Parts



Assembly Procedure for Seals

When repairing a nailer, the internal parts must be cleaned and lubricated. Parker O-lube or equivalent must be used on all O-rings Each O-ring must be coated with O-lube before assembling. A small amount of oil must be used on all moving surfaces and pivots. After reassembling, a few drops of Unocal RX22 oil or equivalent, must be added through the air line before testing